LAVAMAT 46210

Washing Machine

User Manual

AEG

PERFEKT IN FORM UND FUNKTION

Electrolux

Downloaded From WashingMachine-Manual.com Manuals

Dear Customer

Thank you for choosing one of our high-quality products.
With this appliance you will experience the perfect combination of functional design and cutting edge technology.
Convince yourself that our appliances are engineered to deliver the best performance and control - indeed we are setting the highest standards of excellence.
In addition to this you find environmental and energy saving aspects as an integral part of our products.
To ensure optimal and regular performance of your appliance please read this instruction manual carefully. It will enable you to navigate all processes perfectly and most efficiently.
To refer to this manual any time you need to, we recommend you to keep it in a safe place. And please pass it to any future owner of the appliance.
We wish you much joy with your new appliance.

Downloaded From WashingMachine-Manual.com Manuals

Contents

Warnings 5
- Use 5
- Precautions to be taken against frost 6

Description of the appliance 7
- Dispenser box 7
- Control panel 8
- Display 8
- Personalisation 9
  - Child safety 9
  - Audible signal 9

How to run a wash cycle 10
- Loading washing 10
- Proportioning of detergents 10
- Selecting the programme 10
- Selecting the spin speed 11
- Selecting options 11
  - Prewash 11
  - Stain 12
  - Sensitive 12
  - Time saving 12
  - Rinse plus 12
- Selecting a start delay 12
- Start of the programme 13
- Programme sequence 13
- Adding washing during the first 10 minutes 13
- Modifying the programme in progress 13
- Cancelling the programme 14
- End of the programme 14
- Standby mode 14

Washing guide 15
- Sorting and preparing the washing 15
- Wash loads depending on type of materials 15
- Detergents and additives 16
- International symbols 17

Programmes table 18

Consumption 20

Technical specifications 21

Downloaded From WashingMachine-Manual.com Manuals

Care and cleaning	22
Descaling the appliance	22
The exterior	22
Dispenser box	22
Drainage filter	24
Water inlet filters	25
Operating problems	26
Warnings	29
Installation	30
Unpacking	30
Untying	32
Water supply	34
Drainage	35
Electrical connection	36
Positioning	36
Environment	38
Disposing of the appliance	38
Protecting the environment	38

The following symbols have been used in this user guide :

Important information about concerning your safety and information on how to avoid damaging the appliance.

General information.

Information concerning the environment.

Downloaded From WashingMachine-Manual.com Manuals

Warnings

Keep this user manual with your appliance. If the appliance is sold or given to another person, please make sure this user manual is included. This way, the new user will have the relevant operating instructions and warnings.
These warnings are for the safety of you and others around you. Please read these points carefully before installing and using your appliance. Thank you for your attention.

Use

- Unpack or ask for the appliance to be unpacked immediately upon arrival. Check the outside of the appliance is not damaged in any way. Put any complaints you may have in writing on your copy of the delivery receipt.
- Your appliance has been designed for use by adults. Ensure children do not touch the appliance or use it as a toy.
- Do not modify or attempt to modify this appliance. This would put yourself in danger.
- Your appliance is intended for normal domestic use. Do not use the appliance for commercial or industrial purposes or for any purpose other than the one it was designed for : washing, rinsing and spinning.
- Unplug and close inlet hose tap after using appliance.
- Only wash items suitable for this treatment. Refer to the instructions on the label of each item.
- Do not machine wash clothes with ribbing, unfinished or torn material.
- Ensure that all coins, safety pins, brooches, screws etc have been removed before starting a washing programme. If left in washing, they can seriously damage the appliance.
- Do not put items into the washing machine which have had stains removed with petrol, alcohol, trichlorethylen etc. If such stain removers have been used, wait until the product has evaporated before putting these items into the drum.
- Put small items together (socks, belts etc.) in a small linen bag or pillow case.
- Use the amount of detergent recommended in the paragraph “Using the right amount of detergent”.
- Always disconnect the power supply from the appliance before cleaning or maintenance.

Downloaded From WashingMachine-Manual.com Manuals

Precautions to be taken against frost

If your appliance is exposed to temperatures below 0°C, the following precautions must be taken :

- Close the tap and disconnect the inlet hose.
- Place the end of this hose and the drain hose in a basin on the floor.
- Select the Drain programme let it run until the end of the cycle.
- Disconnect the appliance from the power supply by turning the program selector to “Stop”.
- Unplug the appliance.
- Screw the inlet hose back on and replace the drain hose.

This way, the water remaining in the hoses will be drained away, avoiding any ice formation which would damage your appliance.

Before turning your appliance on again, ensure that it is installed in an area where the temperature will not fall below freezing.

Downloaded From WashingMachine-Manual.com Manuals

Description of the appliance

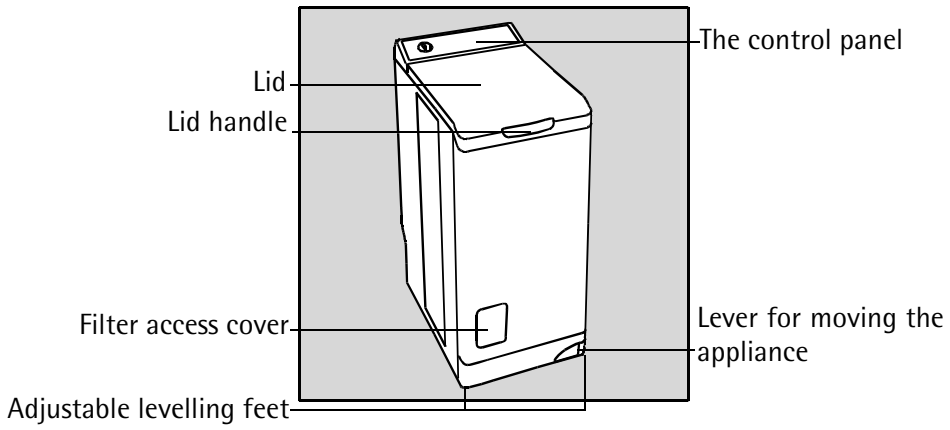

Dispenser box

I Prewash
II Wash
⊛ Softener (do not fill above the MAX symbol M)

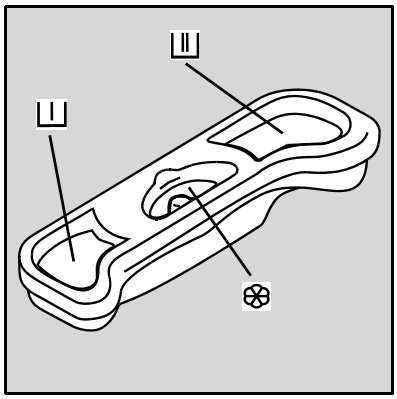

Downloaded From WashingMachine-Manual.com Manuals

Control panel

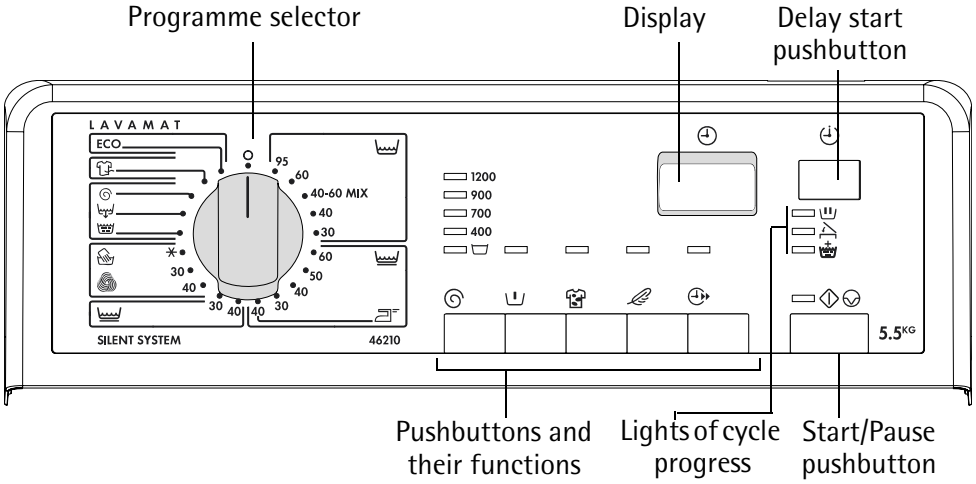

Display

Downloaded From WashingMachine-Manual.com Manuals

Personalisation

Child safety

This option provides two types of locking :
- if the option is activated after the cycle has started, no changes to the options or program are possible.
The cycle runs and you must deactivate the option to run a new cycle.
- if the option is activated before the cycle has started, the appliance cannot be started.

To activate the child safety device, you must :

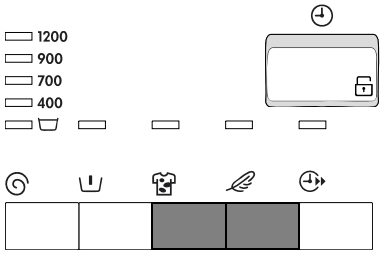

1. Switch the appliance on.
2. Press the STAIN and SENSITIVE buttons at the same time until confirmation with the symbol in the display window.

The appliance memorises the selection of this option.
To deactivate child safety, repeat the process.

Audible signal

The end of the programme and operating anomalies are indicated by acoustic beeps. If you want to remove these acoustic signals, please do the following :

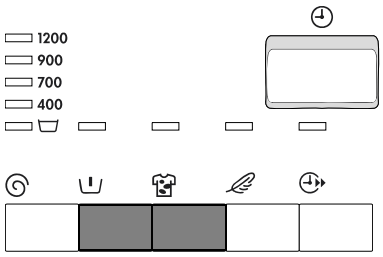

1. Switch the appliance on.
2. Press the PREWASH and STAIN buttons until confirmation with an acoustic beep.
3. The acoustic signal is removed.

The signal is only active if alarm sounds.

If you want to reactivate the acoustic signal, please follow the same procedure.

Downloaded From WashingMachine-Manual.com Manuals

How to run a wash cycle ?

Before you wash laundry in your washing machine for the first time, we recommend you run a preliminary wash at 95°C, with no laundry but with detergent. This will clean the tub.

Loading washing

- Open the lid of the appliance.
- Open the drum by depressing the locking button A : The two shutters unlock automatically.
- Load the washing, close the drum and the lid of your washing machine.

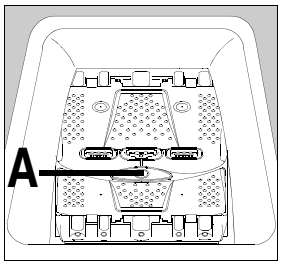

Important : Before closing the lid of your appliance, ensure that the drum is properly closed :
- When the two shutters are closed,
- Locking button A released.

Proportioning of detergents

Your washing machine has been designed to reduce your water and detergent consumption. You can therefore reduce the amounts recommended by detergent manufacturers.
Pour the dose of powder detergent into the wash II and prewash I compartments if you have chosen a programme with prewash. Pour fabric softener into the compartment if necessary ❀.
If you use another detergent type, refer to the section "detergents and additives" in the washing guide.

Selecting the programme

Turn the programme dial to the required wash programme, based on the kind of laundry and how dirty it is (see Programme Table). The indicator for the START/PAUSE ⏯ button flashes in red. The duration of the selected programme is displayed in the display window.
The STOP ○ position switches the washing machine off (it is on in all the

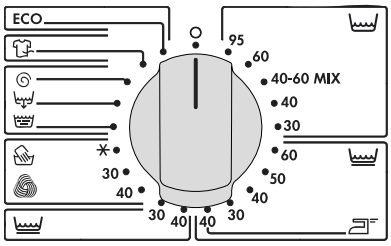

Downloaded From WashingMachine-Manual.com Manuals

other positions). This programme dial can be turned to the right or to the left.

If the programme dial is turned while the washing machine is on a washing cycle, the error code "Err" appears in the display window and the START/PAUSE button flashes in yellow for a few seconds. The programme then continues without taking any notice of the new position of the dial. To remedy the problem, put the dial back to its initial position. The breakdown of the cycle phases reappears in the display window.

Selecting the spin speed

Press the T/MIN button until the indicator for the desired spin speed lights up. You can also select the NO SPIN*, RINSE HOLD* or NIGHT SILENCE PLUS*.

The maximum speed is 1200 rpm for all the programmes.

At the end of the programme, if you have selected RINSE HOLD or NIGHT SILENCE PLUS, you then need to select a SPIN or DRAIN programme to finish the cycle.

RINSE HOLD
The last rinse water is not drained at the end of the selected programme to avoid creasing the washing if it is not taken out of the drum immediately.

Selecting options

Options can be added to a wash programme that has already been selected. Press the button for the desired option. The corresponding indicator lights up. To deactivate an option, do the same thing. The corresponding indicator goes out.

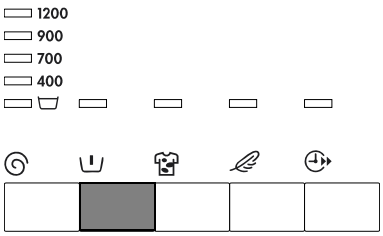

Prewash

Prewash at around 30°C before the main wash cycle which then proceeds automatically.

* depending on model

Downloaded From WashingMachine-Manual.com Manuals

Stain

For very dirty or stained washing. A stain removing product can be poured into the prewash compartment in the product dispenser.

Sensitive

Rinsing action increased by an additional rinse cycle with, at the same time, reduced drum movement (fabric protection). Ideal for frequent washes, for example, in the case of very sensitive skin (not compatible with the Rinse plus option).

Time saving

This function allows you to reduce the length of the cycle depending on the type of programme selected.

Rinse plus

This option means one or more rinses can be added to the programmes Cotton, Synthetics and Delicates (not compatible with the Sensitive option).

You are able to activate it permanently by proceeding in the following way : Press the T/MIN and PREWASH buttons for a few seconds. The RINSE PLUS indicator lights up. The option is permanently activated, even if the appliance is switched off.
To deactivate permanently, repeat the same operation.

If the option selected is not possible, "Err" is displayed in the display window and the indicator for the START/PAUSE button flashes in yellow.

Selecting a start delay

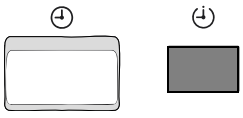

This option allows you to delay the start of a wash programme by 30, 60, 90, 2 hours to 20 hours.
Press the DELAY START button until the display window indicates the period at the end of which you want the programme to start (0' indicates immediate start). The corresponding symbol is displayed in the display window.

You can change or cancel the delayed start time at any time before you press the START/PAUSE pushbutton, by pressing the DELAY START .

If you have already pressed the START/PAUSE pushbutton and you want to change or cancel the delayed start, proceed as follows :
• To cancel the delayed start and start the cycle immediately, press START/

Downloaded From WashingMachine-Manual.com Manuals

PAUSE ⏯ and then DELAY START ⏲. Press START/PAUSE ⏯ to start the cycle.

- To change the timer delay period, you must go through the STOP ○ position and reprogram your cycle.

The lid will be locked during the delayed start time. If you need to open it, you must first pause the appliance by pressing the START/PAUSE ⏯ pushbutton. After closing the lid again, press the START/PAUSE ⏯ pushbutton.

If you use a liquid detergent for a wash cycle with start delay, use a dosing ball that you place directly in the drum and select a programme without pre-wash. If you want to do a pre-wash at the same time as a start delay, please use a powder detergent.

Start of the programme

1. Check whether the water inlet tap is open.
2. Press the START/PAUSE ⏯ button. The corresponding indicator lights up in red. The LID indicator lights up (door locked).

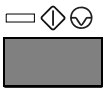

It is normal for the programme selector to remain stationary during the cycle. If a delayed start has been selected, the countdown appears on the display (hour by hour, then 90, and minute by minute from 60 min).

Programme sequence

The WASH indicator lights up when the appliance is in progress.

Adding washing during the first 10 minutes

1. Press the START/PAUSE ⏯ pushbutton. The corresponding indicator flashes in red.
2. The lid can only be opened around 2 minutes after the washing machine has come to a stop. The LID indicator lights off.
3. Put the washing in and close the lid.
4. Press the START/PAUSE ⏯ button again to continue the cycle.

Modifying the programme in progress

Before making any changes to the current programme, you need to pause the washing machine by pressing the START/PAUSE ⏯ pushbutton. If the modification is not possible, "Err" flashes in the display window and the

Downloaded From WashingMachine-Manual.com Manuals

START/PAUSE ⏯ button flashes in yellow for several seconds. If you still decide to change the programme, you must cancel the current programme (see below).

Cancelling the programme

If you want to cancel the programme, turn the programme selector to the STOP ○ position.

End of the programme

The washing machine stops automatically ; the START/PAUSE ⏯ pushbutton goes out and "0" flashes on the display. The lid can only be opened around 2 minutes after the washing machine has come to a stop. The LID indicator lights off.

1. Position the programme dial on the STOP ○ position : the washing machine is switched off.
2. Remove washing.
3. Unplug and close water inlet tap.
4. Check that the drum is in fact empty: if any textiles remain inside, they could be damaged (shrunk) during the next wash or the colour could run onto other pieces of laundry.

We recommend leaving the lid and drum open after use to ventilate the water tank.

Standby mode

If the appliance is on but no commands are selected for 10 min before or after a cycle, it goes into standby mode. The screen light goes out and START/PAUSE ⏯ flashes slowly.
To exit standby mode, simply press any pushbutton or turn the programme selector.

Downloaded From WashingMachine-Manual.com Manuals

Washing guide

Sorting and preparing the washing

- Sort washing by type and care label (refer to International symbols section below) : normal wash for tough fabrics which can withstand intense washing and spinning cycles ; delicate wash for delicate fabrics which need to be treated with care. For mixed loads, loads with items of different types of material, choose a programme and a temperature suitable for the most fragile material.
- Wash whites and colours separately : Otherwise, whites will be coloured or will turn grey.
- New coloured clothes often contain excess dye. It is recommended to wash such items separately the first time. Follow care instructions “wash separately” and “wash separately several times”.
- Empty pockets and unfold items.
- Remove loose buttons, pins and fasteners. Close zip fasteners, tie ups laces and straps.
- Turn multilayered fabrics (sleeping bags, anoraks, etc.), coloured headwear, wool and material with printed designs inside out.
- Wash small fragile items (socks, tights, bras, etc) in a net bag.
- Take special care with curtains. Remove hooks and place net curtains in a net or bag.

Wash loads depending on type of materials

The amount of washing placed in the drum must not exceed the maximum capacity of the washing machine. This capacity can vary depending on the type of materials. Reduce the quantity if washing is heavily soiled or made of absorbant material.

Not all textiles have the same volume in the drum or the same water absorption levels. In general, the drum must therefore be filled :

- to full capacity but avoiding excessive pressure on cotton, linen and cotton/linen mixtures,
- to half capacity for processed cottons and synthetic fibres,
- to a third of its capacity for very fragile items such as net curtains and woollens.

For mixed loads, fill drum depending on most fragile materials.

Downloaded From WashingMachine-Manual.com Manuals

Detergents and additives

Only use detergents and additives designed for use in a washing machine. Refer to manufacturer's recommendations and also Dispenser box and Using the right amount of detergent sections.

We do not recommend mixing different types of detergents. This may spoil the washing.
The amount of detergent to be used depends on the size of the load, the hardness of the water and how heavily soiled the washing is.
If the water is soft, reduce the amount slightly. If the water contains lime scale (a descaler is recommended) or if the washing is heavily soiled or stained, increase the amount slightly.
You can obtain information on the hardness level of water in your area by contacting your water company or other competent source.

There are no restrictions on the use of powder detergents.
Liquid detergents must not be used when a prewash has been selected. For cycles without prewash, they can be added either via means of a dosing ball, or in the detergent compartment. In either case, the wash cycle must be started immediately.
Detergent tablets or doses must be placed in the detergent compartment of your appliance's dispenser box.

For stain removal before a wash cycle, please refer to manufacturer's recommended amounts and instructions. If you use a detergent to remove stains, the wash cycle must be started immediately.

Downloaded From WashingMachine-Manual.com Manuals

International symbols

NORMAL WASH	95	60	40	30		
	Wash at 95°C	Wash at 60°C	Wash at 40°C	Wash at 30°C	Hand wash	Do not wash
DELICATE WASH		60	40	30		

BLEACHING	Whitewashing (bleach) allowed (cold only and in diluted solution)	No whitewashing (bleach)

IRONING	High temperature (max 200°C)	Mid temperature (max 150°C)	Low temperature (max 100°C)	Do not iron

DRY CLEANING	Dry cleaning (all common solvents)	Dry cleaning (all common solvents except trichlorethylene	Dry cleaning (only oil-based solvents and R113)	Do not dry clean

				High temperature Mid temperature	
DRYING	Dry flat	Hang dry	Dry on clothes hanger	Tumble drying permitted	Do not tumble dry

Downloaded From WashingMachine-Manual.com Manuals

Programmes table

All the possibilities are not listed here, only the settings which are customary and sound in practice.

Programme / Type of washing	Load	Possible options
Cottons : White or colour, e.g., normally soiled work clothes, bed linen, table linen, body linen, towels.	5,5 kg	Prewash Stain* Sensitive Time saving Rinse plus Rinse hold Delay start
40-60 Mixed : At 40°C, this programme, like Cotton 60°C, gives the best washing results while mixing cottons and synthetics	5,5 kg	Prewash Stain* Sensitive Rinse plus Rinse hold Delay start
Synthetics : Synthetic fabrics, body linen, coloured fabrics, non-iron shirts, blouses.	2,5 kg	Prewash Stain* Sensitive Time saving Rinse plus Rinse hold Delay start
Easy iron : Reduces creasing and makes ironing easier.	1,0 kg	Prewash Rinse plus Rinse hold Delay start
Delicates : For all delicate materials, for example, curtains.	2,5 kg	Prewash Stain* Time saving Rinse plus Rinse hold Delay start
Wool / **:** Machine washable wool carrying the labels "pure new wool, machine washable, does not shrink".	1,0 kg	Rinse hold Delay start
Rinse : Hand washed items can be rinsed in this program.	5,5 kg	Rinse plus Rinse hold Delay start

Downloaded From WashingMachine-Manual.com Manuals

Drain : Runs an empty cycle after a Rinse hold or (Night Silence Plus).	5,5 kg	
Spin : A spin cycle from 400 to 1000 rpm after a Rinse hold (or Night silence plus).	5,5 kg	Delay start
30 min : Ideal for laundry which just needs refreshing.	2,5 kg	Delay start
ECO **Eco**** **:** White or colour, e.g., normally soiled work clothes, bed linen, table linen, body linen, towels.	5,5 kg	Prewash Stain* Sensitive Rinse plus Rinse hold Delay start

*Not available with programmes with wash temperatures of 40°C and above..
**Reference programme for test conforming to CEI 456 standard.

Downloaded From WashingMachine-Manual.com Manuals

Consumption

Programme	Temperatures	Water consumption in litres	Energy consumption in kWh	Length in minutes
Cottons	95	63	2,10	See display
Cottons	60	58	1,20	
40-60 Mix	40	46	0,80	
Cottons	40	58	0,70	
Cottons	30	58	0,50	
Synthetics	60	45	0,80	
Synthetics	50	45	0,65	
Synthetics	40	45	0,60	
Synthetics	30	45	0,50	
Easy iron	40	48	0,50	
Delicates	40	50	0,50	
Delicates	30	50	0,30	
Wool /	40	45	0,45	
Wool /	30	45	0,40	
Wool /	cold	45	0,35	
Rinse	-	32	0,05	
Drain	-	-	0,002	
Spin	-	-	0,015	
30 min	30	40	0,35	
Eco*	60	46	0,93	

* PReference programme for test conforming to CEI 456 standard (Eco 60° programme) :
46 L / 0,93 kWh / 140 min

Average figures which can vary depending on conditions of use. Consumptions shown refer to the maximum temperature for each programme.

Downloaded From WashingMachine-Manual.com Manuals

Technical specifications

DIMENSIONS	Height Width Depth	850 mm 400 mm 600 mm
LINE VOLTAGE / FREQUENCY POWER CONSUMPTION		230 V / 50 Hz 2300 W
WATER PRESSURE Connection to water supply	Minimum Maximum	0,05 MPa (0,5 bar) 0,8 MPa (8 bar) Type 20x27

CE This appliance conforms to the CEE 89-336 directive concerning the limiting of radio-electric interference and the 2006/95/CE directive concerning electrical safety.

Downloaded From WashingMachine-Manual.com Manuals

Care and cleaning

Unplug the appliance before cleaning.

Descaling the appliance

It is not generally necessary to remove limescale from the appliance if the detergent product is properly dosed.
If it becomes necessary to remove limescale, use a commercially available special non-corrosive product specifically designed for washing machines. Follow the dosing instructions and observe the intervals between uses indicated on the packaging.

The exterior

Use warm soapy water to clean the exterior of the appliance. Never use alcohol, solvents or similar products.

Dispenser box

From time to time you should clean the detergent dispenser to remove any residues from detergent products and so avoid any operating anomalies.

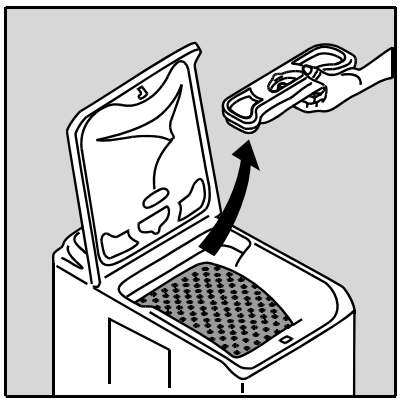

1. Lift out the detergent dispenser.

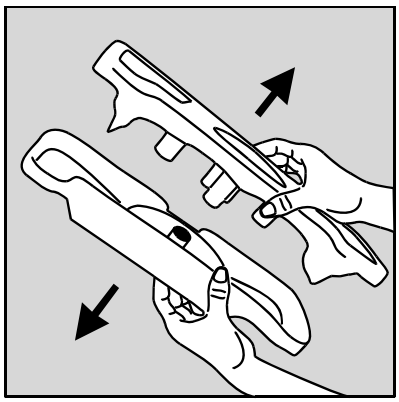

2. Separate the two parts of the detergent dispenser.

Downloaded From WashingMachine-Manual.com Manuals

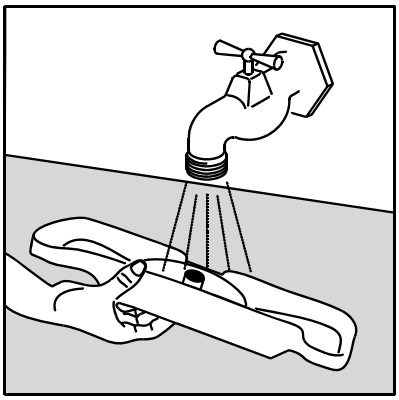

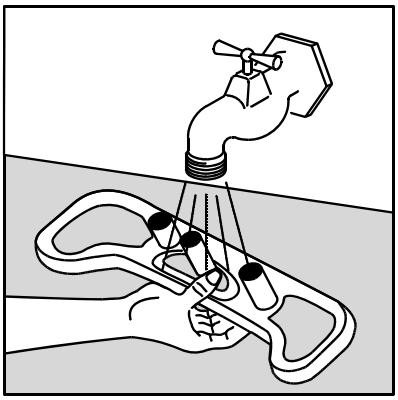

3. Clean the two parts of the detergent dispenser under running water.

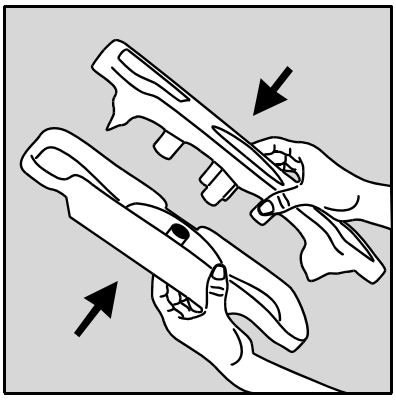

4. Re-assemble the two parts of the detergent dispenser.

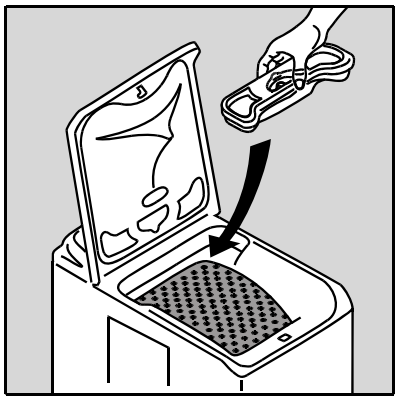

5. Reposition the detergent dispenser.

Downloaded From WashingMachine-Manual.com Manuals

Drainage filter

Clean the filter located at the base of the appliance regularly :

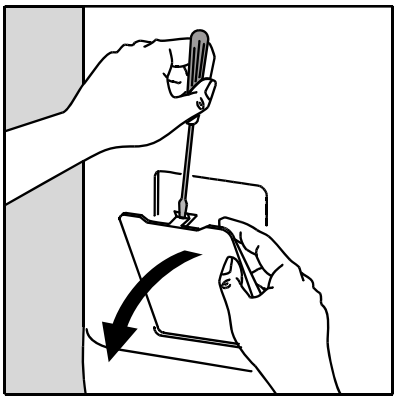

1. Open the door, with the aid of a screwdriver, for example.

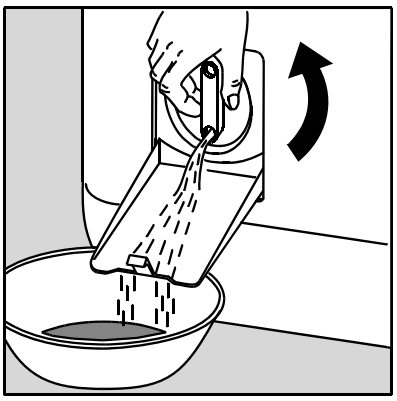

2. Place a bowl underneath it. Turn the plug anti-clockwise until it is vertical and can release the residual water.

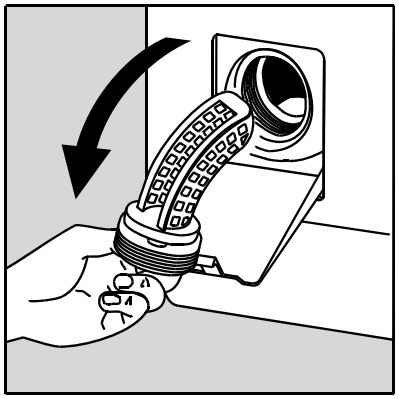

3. Unscrew the plug completely and remove it.

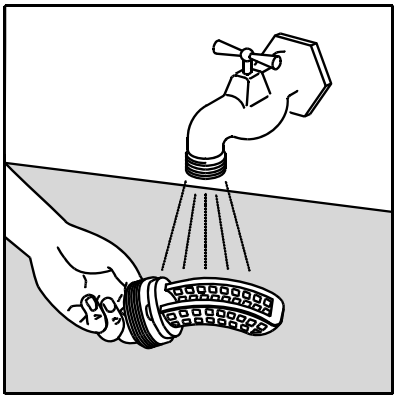

4. Clean it carefully under running water.

Downloaded From WashingMachine-Manual.com Manuals

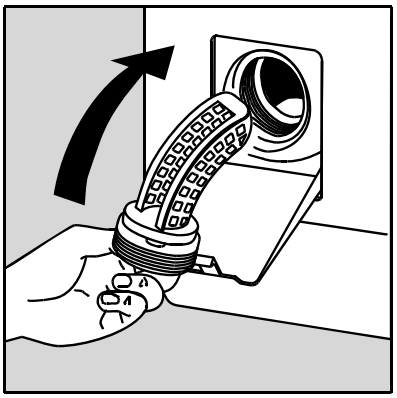

5. Put it back in.

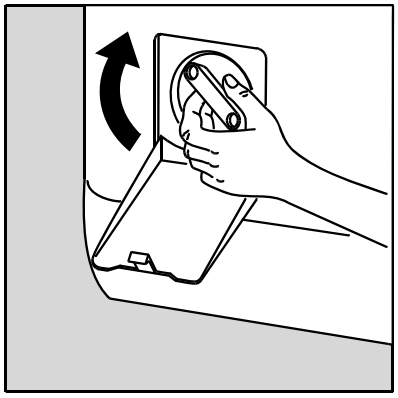

6. Screw in the plug.

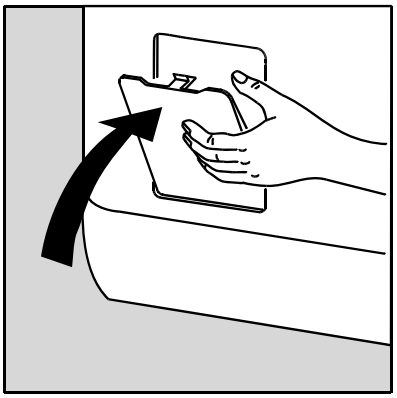

7. Close the door again.

Water inlet filters

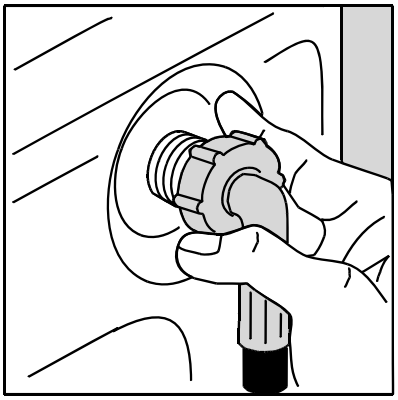

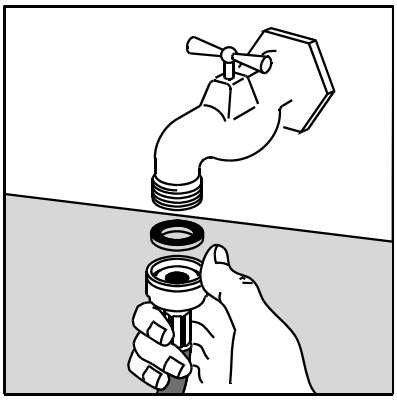

Unscrew the ends of the water inlet pipe and clean the filters.

Downloaded From WashingMachine-Manual.com Manuals

Operating problems

Numerous checks were carried out on your appliance before it left the factory. However, should you notice a malfunction, please refer to the sections below before contacting the after-sales service.

Problems	Causes
The washing machine doesn't start or doesn't fill :	•the appliance isn't plugged in correctly, the electrical installation isn't working, •the lid of your appliance and the drum shutters aren't closed firmly, •the programme start command hasn't been properly selected, •there is a power failure, •the water supply has been cut off, •the water inlet tap is closed, •the water inlet filters are dirty, •a red tab appears on the water inlet hose.
The appliance fills but empties straight away :	•the drainage U-piece is fixed too low (see installation section).
The washing machine doesn't rinse or doesn't empty :	•the drain hose is blocked or bent, •the drainage filter is obstructed, •the out of balance detector has been activated : washing is unevenly distributed in the drum, •the "Drain" programme or "Night Silence Plus" or "Rinse hold" option have been selected, •the height of the drainage U-piece is unsuitable.
You have found water around the washing machine :	•too much detergent has caused foam to overflow, •the detergent is unsuitable for machine washing, •the drainage U-piece isn't attached correctly, •the drainage filter hasn't been put back in place, •the water inlet hose is leaking.
Wash is unsatisfactory :	•the detergent is unsuitable for machine washing, •there is too much washing in the drum, •the wash cycle is unsuitable, •there isn't enough detergent.
The appliance vibrates, is noisy :	•the appliance hasn't been untied properly (see untying section), •the appliance isn't level and is unbalanced, •the appliance is too close to the wall or furniture, •washing is unevenly distributed in the drum, •the load is too small.

Downloaded From WashingMachine-Manual.com Manuals

Problems	Causes
the wash cycle is much too long:	•the water inlet filters are dirty, •the power or water supply has been cut off, •the motor overheating detector has been activated, •the water inlet temperature is lower than usual, •the foam detection security system has been activated (too much detergent) and the washing machine has begun draining the foam, •the out of balance detector has been activated : an extra phase has been added to distribute washing more evenly in the drum.
The washing machine stops during a wash cycle :	•the water or electricity supply is defective •a Rinse hold has been selected, •the drum shutters are open.
The lid doesn't open at the end of the cycle :	•the "immediate opening"* light is not lit, •the temperature inside the drum is too high, •the lid unlocks 1 - 2 minutes after the end of the cycle*.
The E40 error code appears in the display** and the START/ PAUSE pushbutton flashes in yellow*** :	•the lid isn't closed properly.
The E20 error code appears in the display** and the START/ PAUSE pushbutton flashes in yellow*** :	•the drainage filter is obstructed, •the drain hose is blocked or bent, •the drain hose is fixed too high (see "Installation" section). •the drainage pump is blocked, •the standpipe is blocked.
The E10 error code appears in the display** and the START/ PAUSE pushbutton flashes in yellow*** :	•the water inlet tap is closed, •the water supply has been cut off.
The EF0 error code appears in the display** and the START/ PAUSE pushbutton flashes in yellow*** :	•the drainage filter is obstructed, •the anti-flooding security system has been activated, please proceed as follows : - close the water inlet tap, - empty the appliance for 2 minutes before unplugging, - call the after-sales service.
The drainage pump runs constantly, even when the appliance is inactive :	•the anti-flooding security system has been activated, please proceed as follows : - close the water inlet tap, - empty the appliance for 2 minutes before unplugging, - call the after-sales service.

Downloaded From WashingMachine-Manual.com Manuals

Problems	Causes
Softener runs directly into the drum when filling the dispenser box :	•you have gone past the MAX indicator.

* Depending on model.
** On some models, the audible signals can sound.
*** After solving any problems, press the START/PAUSE pushbutton to restart the interrupted programme.

Downloaded From WashingMachine-Manual.com Manuals

Warnings

- This appliance is heavy. Take care when moving it.
- The appliance must have the transit bolts removed before use. If all protective transit devices are not removed, this could cause damage to the appliance or to neighbouring cabinets or furniture. The appliance must be unplugged from the electricity supply when the transit bolts are being removed.
- Connection to the water supply must be carried out by a qualified plumber.
- The appliance must be equipped with an earthed power plug which conforms to regulations.
- If your domestic electrical circuit needs adapting to allow the appliance to be plugged in, use a qualified electrician.
- Before connecting your appliance to the power supply, carefully read the instructions in the chapter entitled “Electrical connection”.
- Ensure that, after installation, the power cable is not trapped under the appliance.
- If the appliance is installed on carpeted floor, ensure that the carpet does not obstruct any ventilation ducts located at the base of the appliance.
- Replacing the power cable should only be carried out by the After Sales Service.
- The manufacturer cannot be held responsible for any damage resulting from incorrect installation.

Downloaded From WashingMachine-Manual.com Manuals

Installation

Remove all protective packaging for transit before using for the first time. Keep in case needed for future transit : Transporting a non-secured appliance may damage internal components and cause leakages and malfunctions. The appliance can also be damaged through physical contact.

Unpacking

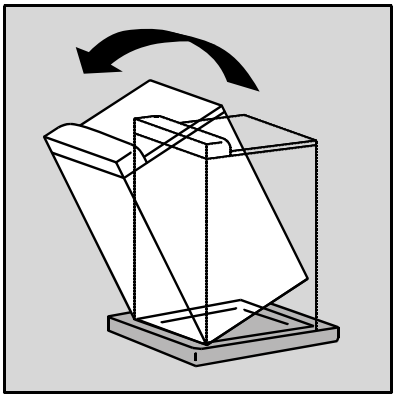

1. Tilt the appliance backwards.

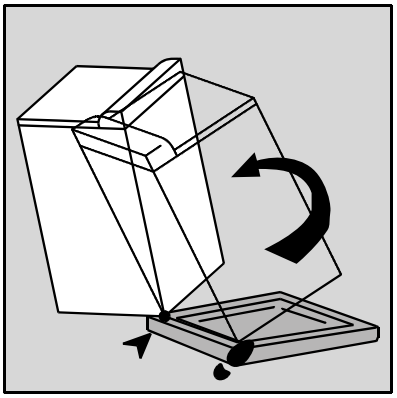

2. Make it do a quarter turn on one of the corners to remove the transport base.

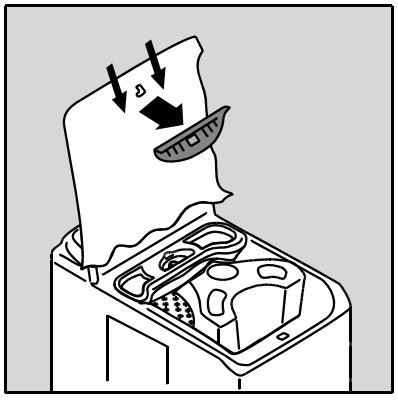

3. Open the lid of the appliance and remove the red block.

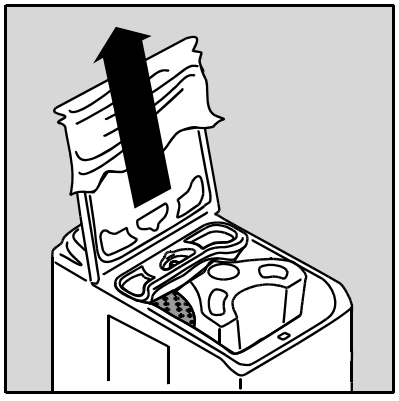

4. Remove the plastic film.

Downloaded From WashingMachine-Manual.com Manuals

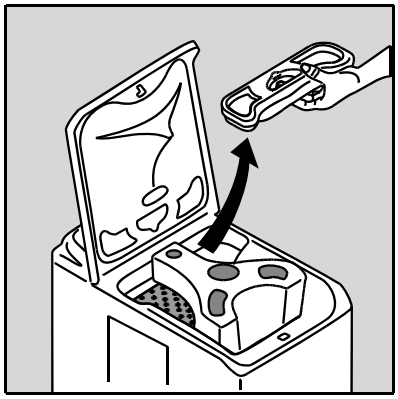

5. Lift the detergent dispenser out upwards.

6. Remove the block immobilising the drum.

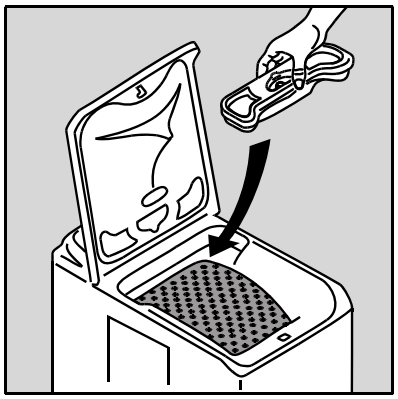

7. Replace the detergent dispenser.

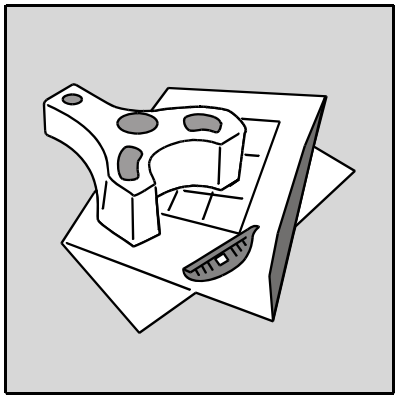

Downloaded From WashingMachine-Manual.com Manuals

Untying

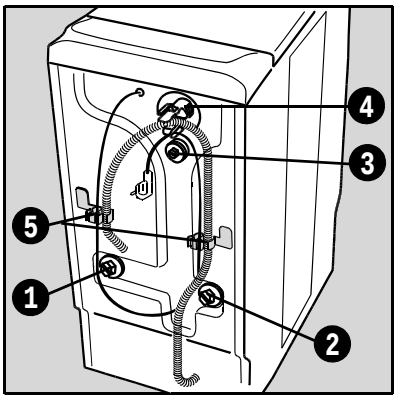

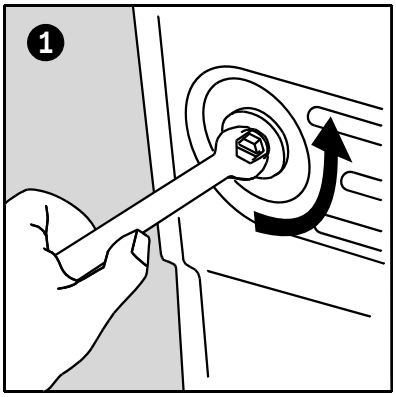

Operation 1.

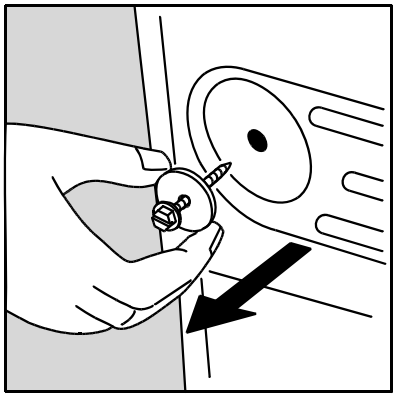

Operation 2.

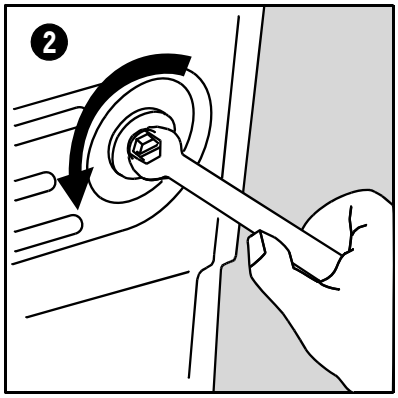

Operation 3.

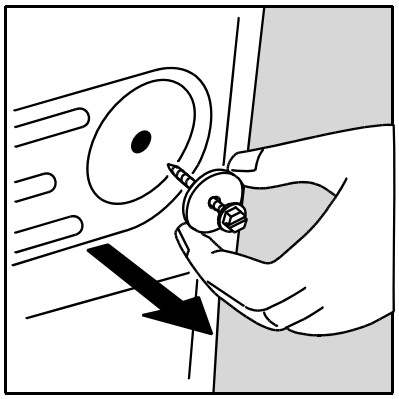

Operation 4.

Downloaded From WashingMachine-Manual.com Manuals

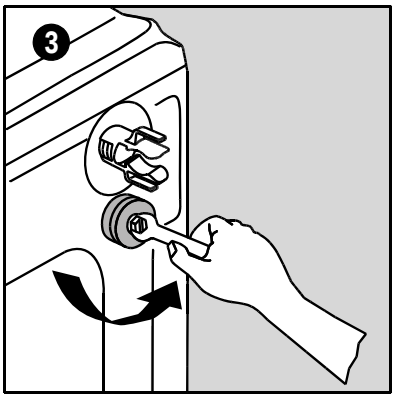

Operation 5.

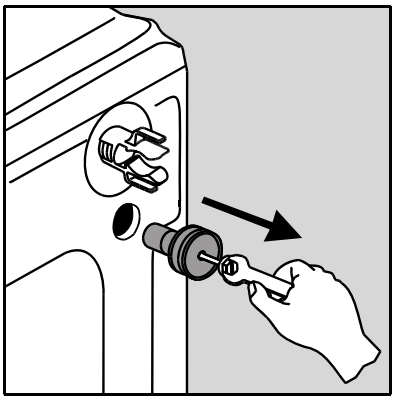

Operation 6.

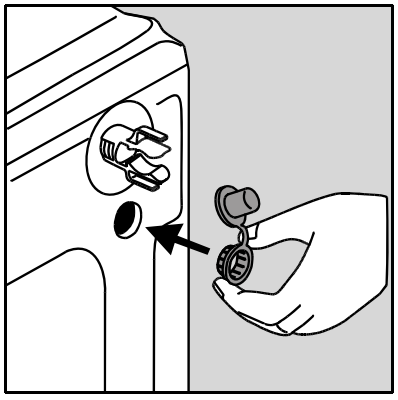

Operation 7.

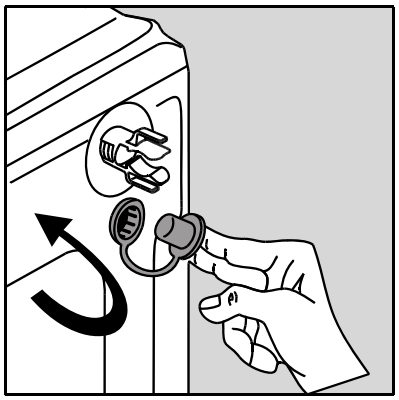

Operation 8.

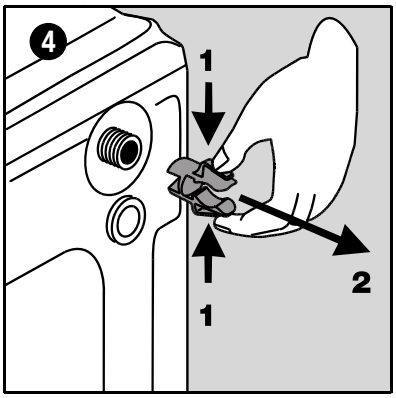

Operation 9.

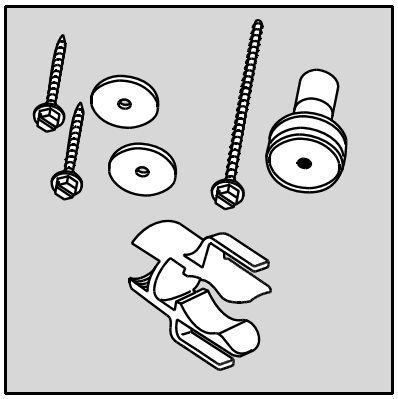

Downloaded From WashingMachine-Manual.com Manuals

To install your washing machine at the same level as surrounding furniture, proceed as follows :

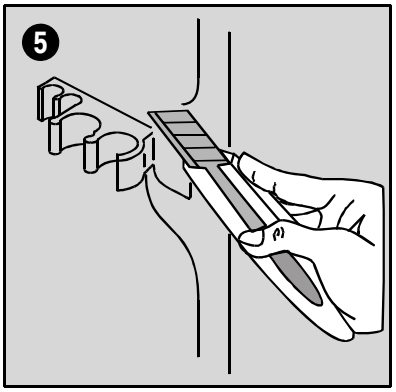

Operation 1.

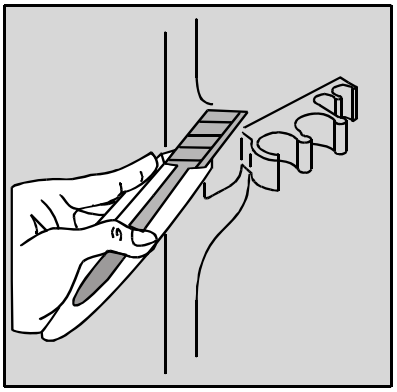

Operation 2.

Water supply

Install the supplied water inlet hose at the rear of your washing machine by proceeding as follows (Do not reuse an old hose) :

Operation 1.

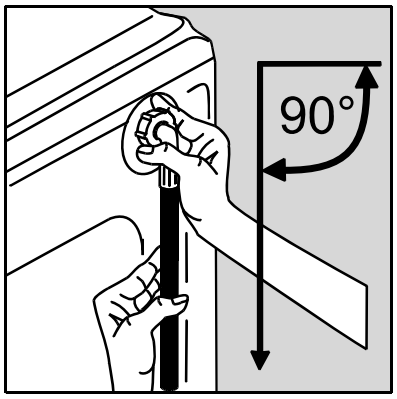

Operation 2.

Downloaded From WashingMachine-Manual.com Manuals

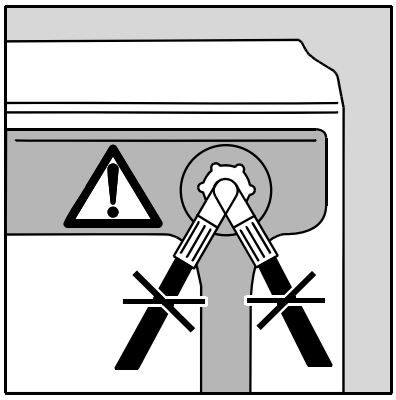

Operation 3.

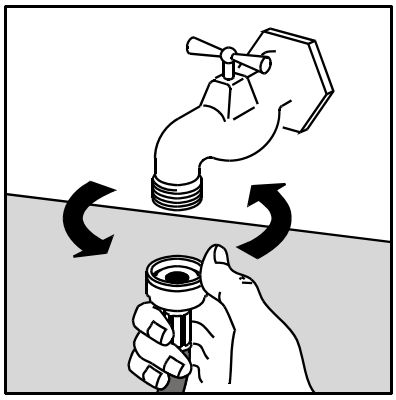

Operation 4.

Open the water inlet tap.
Check there are no leaks.
The water inlet hose can not be extended. If it is too short, please contact the after-sales service.

Drainage

The connector at the end of the flexible hose can be attached to all common types of standpipe.

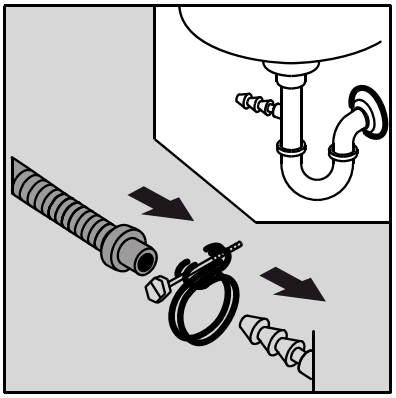

1.Attach the connector to the standpipe with the hose clamp supplied with the appliance*.

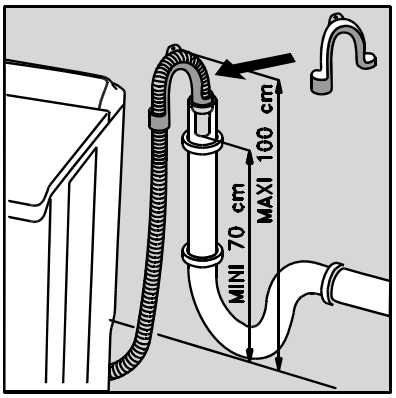

2.Fit the U-piece on the drainage hose. Place everything in a drainage point (or in a sink) at a height of between 70 and 100 cm. Ensure it is positioned securely.

* depending on model

Downloaded From WashingMachine-Manual.com Manuals

Air must be able to enter the end of the hose, to avoid any risk of siphoning. The drain hose must never be stretched. If it is too short, contact a tradesperson.

Electrical connection

This washing machine must only be connected in single-phased 230 V.
Check the fuse size : 10 A for 230 V.
The appliance must not be connected with an extension lead or multi-plug adaptor.
Ensure that the plug is earthed and that it is in accordance with current norms.

Positioning

Position the appliance on a flat and hard surface in a ventilated location. Ensure the appliance does not come into contact with the wall or other furniture.

To move the appliance, proceed as follows :

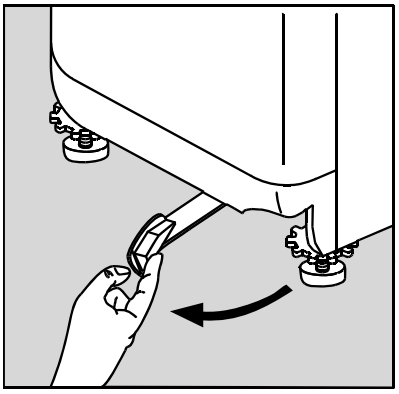

1.To move your appliance, place it on its rollers by pulling the lever located at the base of the appliance hard from right to left. Once the appliance is in the desired position, push the lever back to its original position.

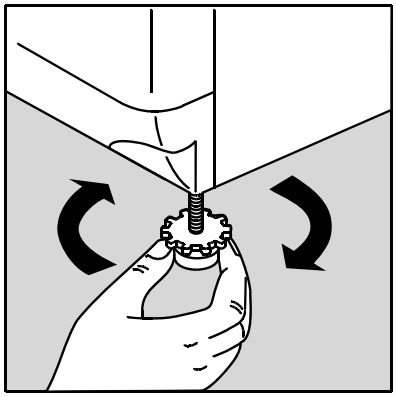

2.Accurate levelling avoids vibrations, noise and prevents the appliance from moving when running.
Make the appliance level by adjusting the foot that is too short. Unscrew the whole foot and the collar. (Lift the appliance, if necessary).

Downloaded From WashingMachine-Manual.com Manuals

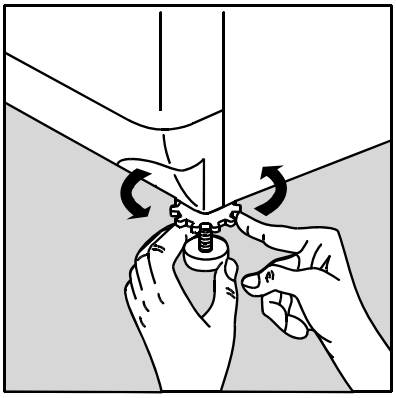

3.When the appliance is stable, hold the foot against the floor and raise the collar as far as it will go.

Downloaded From WashingMachine-Manual.com Manuals

Environment

Disposing of the appliance

All materials carrying the ♺ symbol are recyclable. Dispose of them at a waste collection site (enquire at your local council) for collection and recycling.
When disposing of your appliance, remove all parts which could be dangerous to others : cut off the power supply cable at the base of the appliance.

The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Protecting the environment

To save water and energy and therefore help protect the environment, we recommend the following :

- Whenever possible, use the appliance at full capacity and avoid partial loads.
- Only use the prewash and soak programmes for heavily soiled items.
- Use an appropriate amount of detergent for the hardness of the water (cf. section “Using the right amount of detergent”), the size of the load and how soiled the washing is.

Downloaded From WashingMachine-Manual.com Manuals

www.electrolux.com

108 4291 00 - 09/08

Downloaded From WashingMachine-Manual.com Manuals